



# Rena Klena User Guide

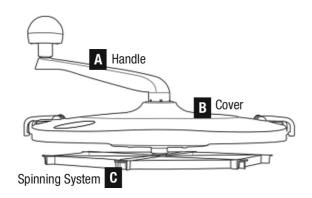

**D** Inner Washing Basket, **E** Outer Bucket **G** Basket Shaft, **H** Shaft Slot

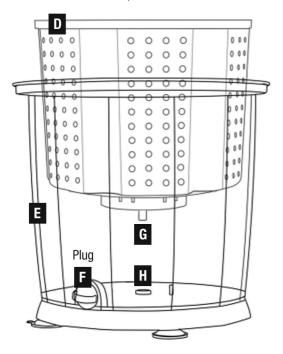


# **Operating Instructions**

- 1. Secure the Rena Klena on a flat surface; a table top or on the floor.
- Place the clothes inside and add liquid detergent. If using powdered detergent, make sure to dilute in water first before placing with clothes.
- 3. Add water to cover the clothing in the Inner Washing Basket and close the lid.
- 4. To begin washing, place the handle in the Wash Cycle Position slot, located at the centre of lid (making sure the handle is facing outwards) and turn to make wash arrow move forward. Turn for about 2 minutes. For best results, it is suggested to change spinning direction every few turns.

  (See reverse side for images explaining handle positions).
- 5. To drain, remove the silicon bung at the base of Rena Klena to allow water to flow out
- To begin rinsing, fill the bucket again with water and turn handle a few times in the wash slot to assist to remove sudds from clothes.
- 7. To dry clothes, make sure all liquid is removed. Change the handle position to the outside slot (face handle outwards) and follow the arrow and spin for 2 minutes. Excess water from clothing will start to drain as the rotation increases in the cycle. Do this for up to 2 minutes. (See reverse side for images explaining handle positions).

## **Refitting Washing Basket**

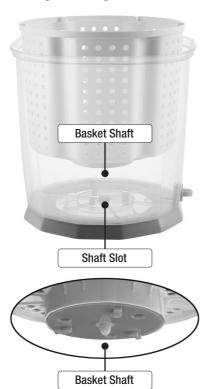

It is important to re-position the Inner Washing Basket (**D**) correctly when placing it inside the Outer Bucket (**E**). The Inner Washing Basket (**D**) is designed to be removed, but care must be taken to re-position it corretly when returning it to the Outer Bucket (**E**). Always make sure the Basket Shaft (**G**) at the base of the Inner Washing Basket (**D**) slots into the Shaft Slot (**H**). When the Inner Washing Basket (**D**) is correctly in position, move it slightly by hand; if the grey adjitator at the base of the Outer Bucket (**E**) moves, you have re-positioned the Inner Washing Basket (**D**) correctly.

# **Washing Speed Reference Table**

# of Items	Water Quality	Handle Speed	Wash Time
1-2pcs	6 litres	1 sec/revolution	2 mins
2-3pcs	8 litres	1 sec/revolution	2-3 mins
3-4pcs	10 litres	2 sec/revolution	3-5 mins

### **Correct Handle Positioning**

The handle is designed to be removed and positioned in either of the two slots on the top of the Cover (**B**). When doing either cycle (wash or spin dry) always make sure the handle is facing outwards.



Wash Cycle Handle Position



Spin Dry Cycle Handle Position

# **Saftey Tips**

- Do not use water over 50°C.
- Do not move the Rena Klena by lifting it by the handle.
- Do not leave any water inside the Rena Klena after use.

#### **Care Instructions**

After use, it is recommended that the Rena Klena be cleaned thoroughly with fresh water.

PO Box 34 Five Dock NSW 2046 Australia PHONE: **02 9712 1022** FREECALL: **1800 616 248** info@enkelclean.com.au I **www.enkelclean.com.au**