


enfel klokmop

User Guide

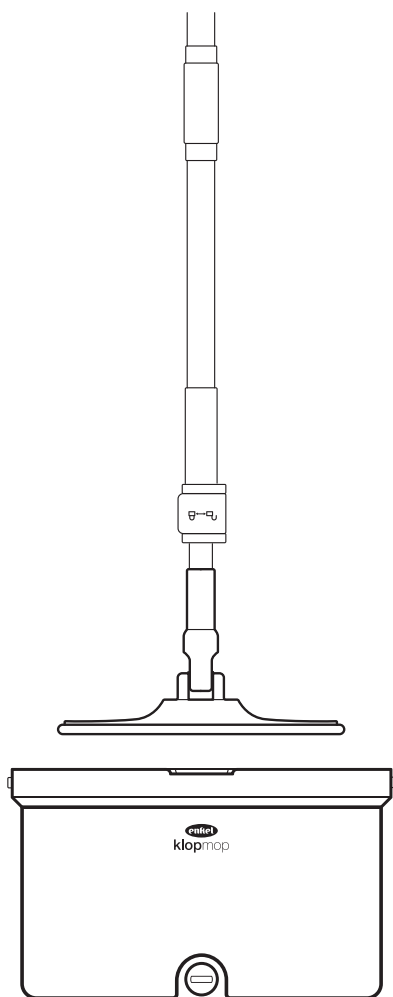

Welcome to the Klok Mop by Enkel, the next generation of floor cleaning technology.

Unique features of the Klok Mop include:

The **dual chambers** separate dirty water from clean during mopping.

The fine, **re-usable microfiber pads** lift and trap dirt with ease.

The **square mop head** gets deep into corners and swivels 360 degrees around obstacles.

The **mop handle lays horizontal** for cleaning under couches and furniture.

The **spin dry action** allows you to decide how much moisture remains in the mop head.

Simply pull the **plug** and pour away dirty water after mopping.


We hope you enjoy using the Klok Mop by Enkel. Please do not hesitate to call or email us if you have any queries or suggestions.

Components of the Klok Mop

Klok Mop Bucket



Mop Head

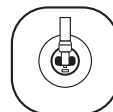

Mop Pad



Lower Pole Section



Middle Pole Section




Upper Pole Section




Klok Mop Pole Bucket


The System comes fully assembled, ready for use.

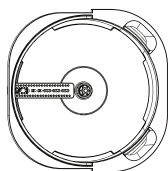


The Klok Mop has two buckets. The inner bucket holds the clean water and the mop mechanism. The outer bucket retains the dirty water after mopping. You may wish to remove the inner bucket for cleaning. To remove the inner chamber simply lift it straight up and out by its handle.

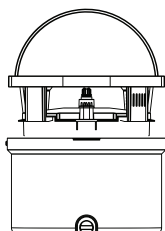

When returning the inner bucket to the outer bucket, first make sure that the handle of the outer bucket is laid horizontal to the side of the outer bucket with a notch.

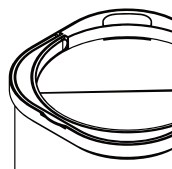


Then return the inner bucket to the outer bucket making sure that the handles of each bucket are on the same side and the arrows on the inner and outer buckets align.

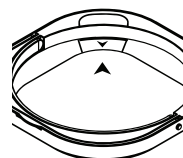


Klok Mop Pole and Mop Head


1. Screw upper pole and middle pole tightly together.

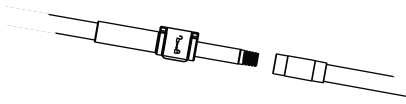


2. Screw the bottom pole and middle pole tightly together.

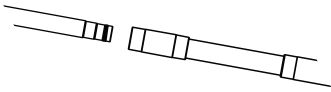


3. Now that the mop handle pole is assembled, tightly screw the pole into the mop plate.

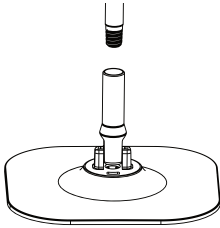

4. Gently press the white side of the microfiber mop pad onto the base of the mop plate.

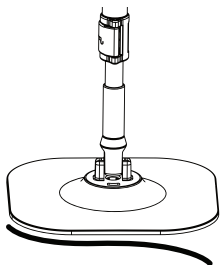

Using the Klok Mop

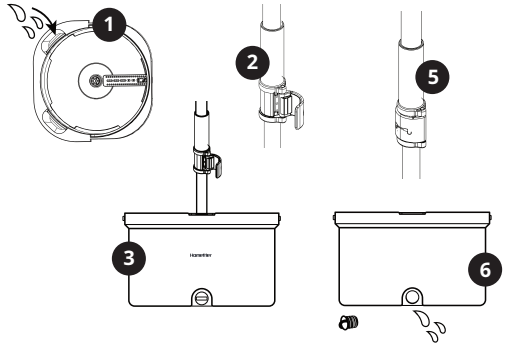

1. Add clean water to the inner bucket. You can add water from the two inlets at the corners of the inner bucket as shown below or you can open the transparent cover at the top of the inner bucket, add water directly to the central chamber, then replace the cover. **Feel free to add cleaning or disinfecting products to the mop water for an even deeper clean. We recommended streak and residue-free cleaners.**
2. Release the latch on the lower part of the mop pole.
3. To wash the mop, place the mop plate straight down into the bucket aligning the centre of the mop with the central bearing in the middle of the bucket. Pull the pole handle upwards to its highest level so it is fully extended. This action should extend the mop by approximately 40cms. Then push all the way down firmly. This motion pumps water onto the mop head and activates the spinning of the mop head. When the pole is pushed down as low as it can go hold that position for 2 seconds. Repeat this action 5-10 times to completely wash the mop head.
4. To spin dry the mop, pull the pole handle upwards only a short distance of approximately 15cm. Push down fast and then lift the handle straight back up again a short distance and push down fast once more. Repeat this motion 10 times. The faster you repeat this up and down motion the dryer the mop head will become. Lifting the pole handle this short distance activates the spinning motion of the mop but not the water pump within the bucket hence the mop head spins dry.
5. Once the mop is dry remove it from the bucket and place the mop head on the floor. Adjust the pole length to a comfortable height and close the latch on the lower part of the mop pole so the pole length cannot change. You can then mop your floor.
6. After you've finished mopping remove the dirty water from the outer chamber within the bucket. Do this by pulling out the drainage plug on the outside of the bucket (at the base) and pour the water out. Another option is to lift out the inner chamber to pour out the dirty water.

Warranty and Customer Support

So Simple Solutions Pty Limited offers a 12-month warranty on the Klok Mop and certifies that it is free from defects in material and workmanship from the date of purchase. This warranty does not cover damage caused by misuse or abuse, accident, the attachment of any unauthorized accessory, alteration to the product, or any other conditions beyond the control of So Simple Solutions. The Klok Mop is made for household domestic use only.

So Simple Solutions shall not be responsible for any type of incidental, consequential, or special damages. This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual state regulations, some of the above limitations and exclusions may not apply to you.



PLEASE DO NOT HESITATE TO CONTACT SO SIMPLE SOLUTIONS

38 Ramsay Road, Five Dock NSW 2046

Freecall: 1800 616 248

info@sosimplesolutions.com.au

Country of origin: China



Please dispose of
packaging thoughtfully
and recycle where possible